



RB433 installation on **MK-UH18SP/MK-UH16DP**


1. Remove default front panel bracket

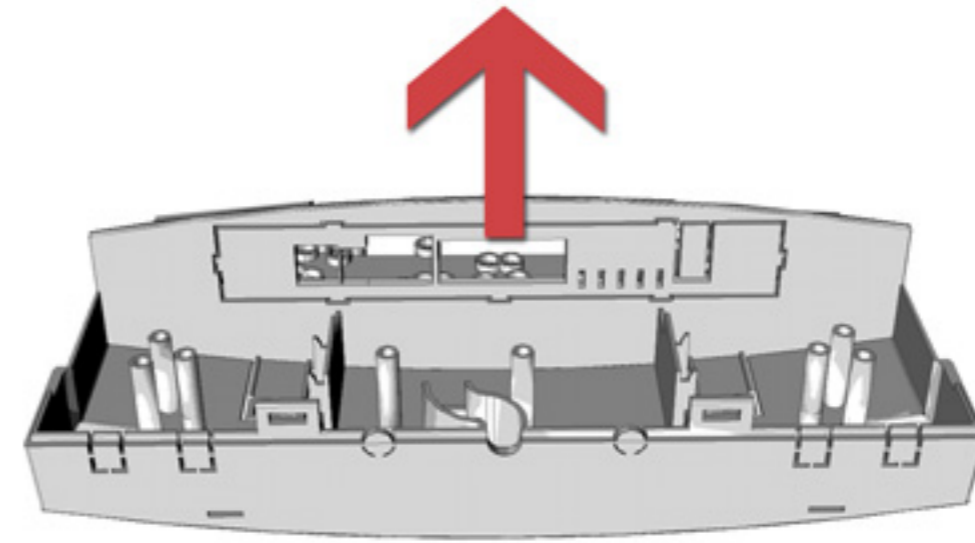


2. Rotate RB433 board 180 degree

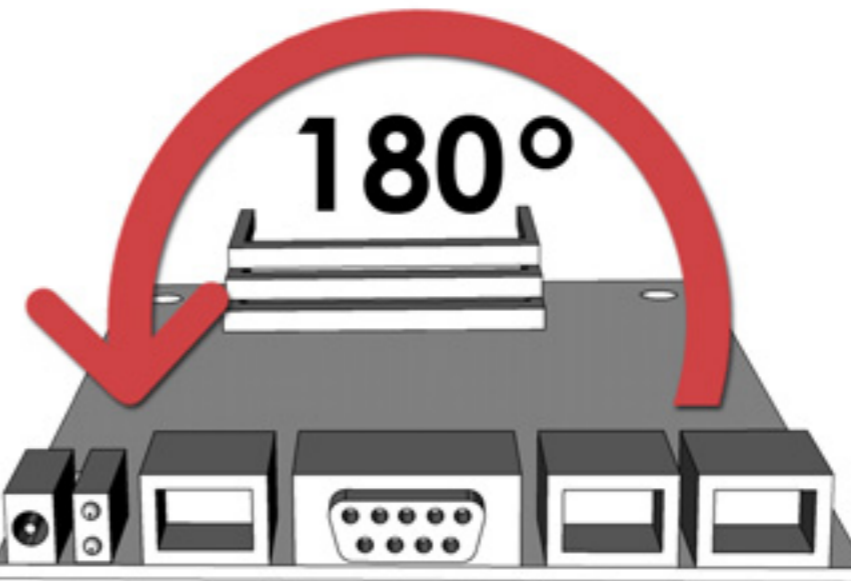

3. Place 4 screws and tall boss in respective holes

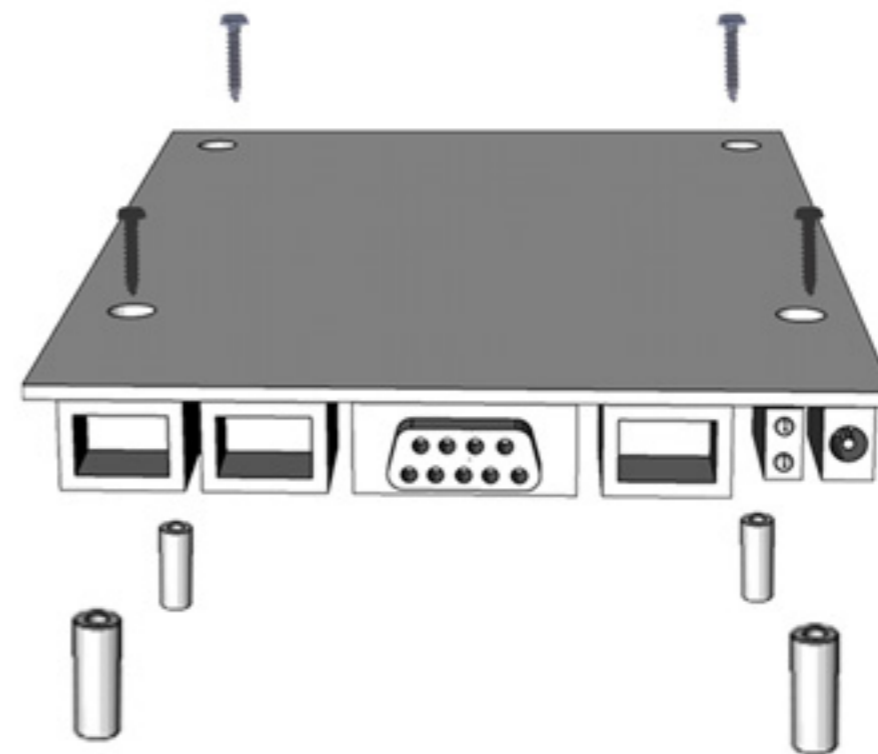

4. Place and glue new bracket in front panel location

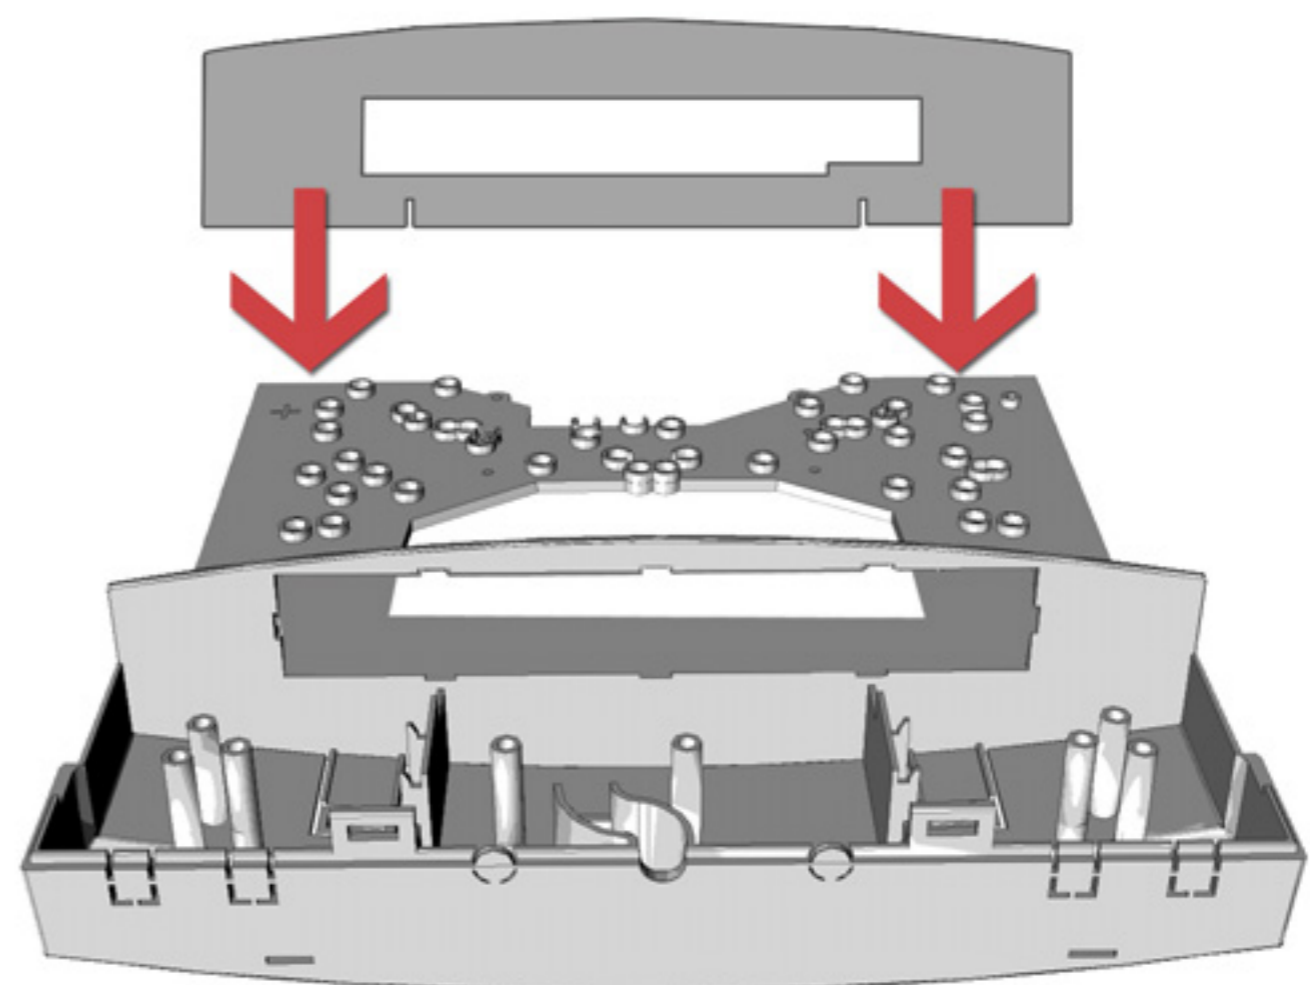

5. Setup done!

